

### ADJUSTING YOUR CHAIR

Fine tuning of your chair is possible for maximum comfort.



1. Raise or lower the Air Chair height at the eyebolt, via the over head knot.
2. To adjust the incline of Air Chair, remove the overhead dowel. Adjust the slide knot (see diagram) back or forward dowel firmly into dowel holders.
3. Fully reclined sitting can be achieved by setting side dowels virtually parallel with the overhead dowel. This is only recommended when you are familiar with the chairs settings.

### TO FIT OPTIONAL ARMREST

1. Stand in front of chair.
2. Remove right front dowel from dowel holder.
3. Slip short-sided webbing loop firmly over removed dowel butt-end, making sure that the webbing is taught and flat against the dowel. Note: Arc of armrest must face inward to the chair.
4. Now insert dowel firmly back in to dowel holder.
5. Repeat same procedure on right hand rear dowel and on opposite side.

### TO FIT OPTIONAL CUP HOLDER

1. Simply loop cup holder through webbing and pull through over overhead dowel.
2. Position where suitable.

### WASHING AND CARE INSTRUCTIONS

Using soft brush and warm soapy water, scrub where necessary.

 
Allow to dry on a flat surface or by hanging.

**WARNING!** Not suitable for washing machine, tumble dryers or chemical bleaches.

### IMPORTANT REMINDERS


1. The eyebolt must be screwed into pre-drilled 5/16" Hole. Failure to adhere to this could result in injury.
2. The Air Chair is made of 600 Denier Polyester for strength and durability. Mildew or moisture does not affect the chair. It can withstand long periods of exposure to the sun but will fade over time. We recommend you store the chair in the travel bag provided when not in use for extended periods.
3. Spinning or swinging in both the chair and the footrest are not recommended, The eyebolt may loosen, which may result in injury, Do not hang or pull on the overhead dowel.

### THE "BRAKE"

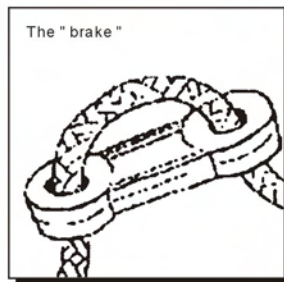

## AIR CHAIR

 Instruction Booklet

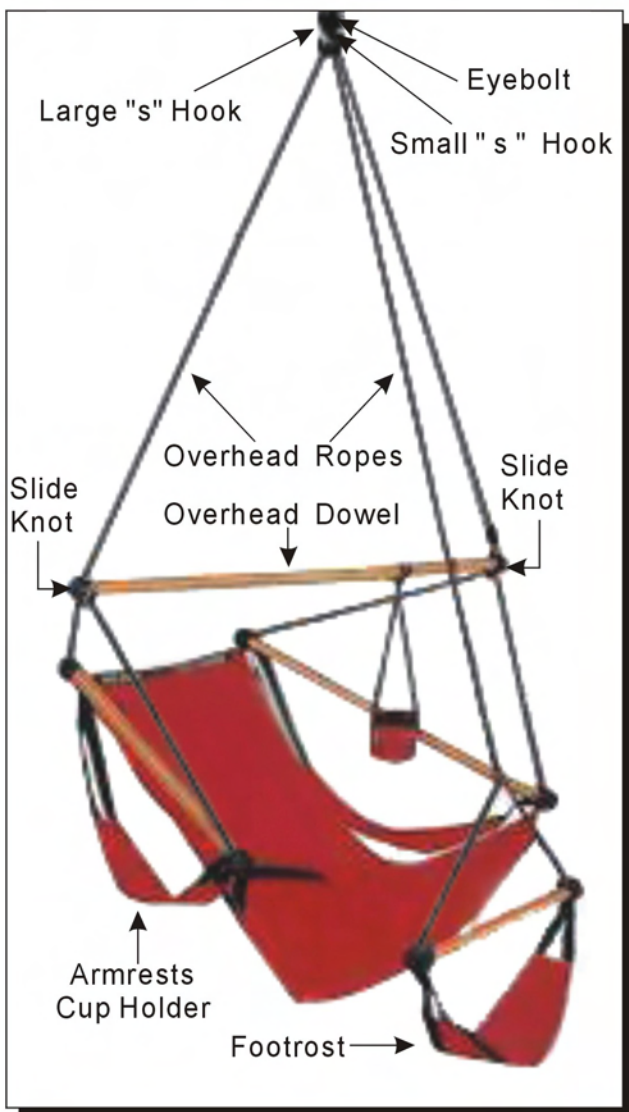

**PLEASE NOTE:** End consumer is ultimately responsible for verifying proper installation of eyebolt according to our guidelines explained here within. We strongly recommend that you adhere to our maximum 12" above floor chair height recommendation.

### INSTALLING THE EYEBOLT

1. Locate ceiling joist [ by stud Finder or tapping and verifying with a small nail]. Be sure to locate exact center. [Drawing "A" ]
2. Using a 5/16" wood drill bit, drill a hole [approx. 5" deep] perpendicular to the ceiling. **WARNING!** Hole must be directly in the center of the stud for maximum weight bearing capacity. Failure to do so could cause eyebolt to loosen.
3. Screw in the supplied eyebolt until all threads have disappeared into the joist. Do not loosen or adjust once in place.

### HANGING THE AIR CHAIR

1. Tie an overhead knot through the large "s" hook provided and using the two overhead ropes. Be certain to maintain an equal rope length between the knot and the chair on both sides. [ Drawing "B" ].
2. Hang the Air Chair from the pre-installed eyebolt.
3. Install the wooden dowel firmly into the dowel holders [see diagram], Ensure the dowels are firmly seated, with the longest dowel overhead, the equal length dowels on the sides, and the short dowel on the footrest.
4. Verify all knots and dowel holders before sitting in the Deluxe Hanging Chair. **WARNING!** The Air Chair has rated load of 350 pounds.
5. The overhead dowel must be level, or your chair may be lop-sided, Adjustment of the overhead ropes may be necessary.

### "A" "B" TYING AN OVERHEAD KNOT



### FOOTREST ASSEMBLY

1. Tie the small "s" hook provided, to the rope with an overhead knot.
2. Hang the footrest from the same eyebolt as the chair, Adjust the length so that it hangs just below the bottom of the seat of the chair.
3. The footrest may be adjusted up or down for further comfort.
4. Now, while sitting in the chair, place our heels in the centre of the footrest.

